

Montageanleitung

Assembly instructions
Instructions d'installation

sentiotec 
DIVISION OF HARVIA GROUP

■ EN



Element sauna

PANORAMA SMALL

213 x 160 x 201 cm



Element sauna

PANORAMA SMALL

■ Cabin size:	209 x 158 x 201 cm
■ Incl. rim:	213 x 160 x 201 cm
■ Interior dimension:	196 x 155 x 198 cm
■ Wall thickness:	64 mm



Symbol photo

Preparing for installation

Read these assembly instructions carefully and keep them within reach when using the sauna so that you can look up product information at any time.



These assembly instructions can also be found in the downloads section of our website: www.sentiotec.com/downloads.

Attention!

The electrical connection may only be performed by a qualified electrician or similarly qualified person.

Important note:

- Before you begin work, check the parts list to ensure that all the individual parts have been delivered. If you discover any missing parts, notify your dealer within 14 days of receiving the sauna cabin.
- The room that the sauna is installed in must be dry and ensure an appropriate amount of air circulation.
- The floor must be level and even, preferably a stone or tiled floor.
- A minimum room height of 230 cm is required for the cabin installation work.
- A distance of at least 5 cm from the wall must be maintained.
- The inside of the wooden parts used must not be handled with any impregnating material.
- You need an assistant for the installation.

- Wood is a natural product that can swell, shrink or warp, despite good storage. For this reason, some force may be necessary during the installation.
- All screw fittings must be pre-drilled.

Tools required

- Hammer with a wooden head or a mallet
- Cordless screwdriver with bits for cross-head screws and Torx
- Roller tape measure
- Drill bits with a diameter of 3 mm, 10 mm, 20 - 30 mm (for sauna heater power cable)
- Spirit level
- 1.5 mm hexagonal socket wrench
- Utility knife
- Ladder
- Backsaw



This symbol indicates tips and useful information




Pre-drill



Cut to real measurement with backsaw



Check the right angle:

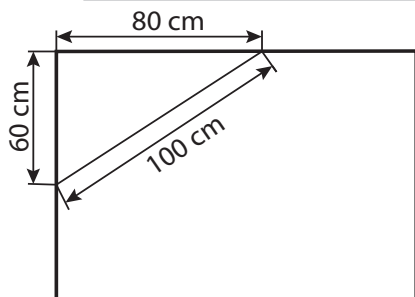



Maintenance and cleaning

- The sauna should be cleaned with a damp cloth. Only use warm water – no cleaning products.
- We recommend heating the cabin once a month if the sauna is not used for a long time.



Pitch pockets are not grounds for return, since they can always appear in spruce wood and the depth at which they lie cannot be detected during the sorting-out process.

If these are just under the surface, heat can cause them to soften and “bleed”.

The leaking pitch can be removed with a rag soaked in acetone. If only droplets of pitch occur, allow these to harden and then carefully scrape them off with a knife.

Disposal



- Please dispose of packaging materials in accordance with the applicable disposal regulations.
- Used units contain reusable materials as well as hazardous substances. Therefore, do not dispose of your used unit with household waste, but rather do so in accordance with the locally applicable regulations.

PANORAMA SMALL parts list

Base frame

- 1 floor frame 4 x 8 x 151.5 cm
- 1 floor frame 4 x 8 x 206.5 cm
- 1 floor frame 4 x 8 x 150 cm

Wall element right side

- 1 wall element W1 51 x 194 cm
(Electrical element)
- 1 wall element W2 93.5 x 194 cm

Wall element rear side

- 1 wall element W3 93.5 x 194 cm
(Ventilation element)
- 1 wall element W4 102 x 194 cm

Wall element left side

- 1 wall element W5 93.5 x 194 cm
- 1 wall element W6 51 x 194 cm
(electrical element)

Corner posts

- 2 corner posts 184 x 7 x 4 cm

Mounting rails

- 2 mounting rails for glass element (left and right)
200.4 x 8.2 x 5.5 cm
- 1 mounting rail for glass element (top)
208.9 x 8.2 x 5.5 cm
- 2 cover strips for glass front (left and right)
193.4 x 7 x 2.5 cm
- 1 mounting rail for glass front (top)
213.9 x 7 x 2.5 cm

Roof

- 1 roof element 88 x 204.5 cm
- 1 roof element 59.5 x 204.5 cm
- 1 roof frame strip 4 x 2 x 151.5 cm
- 1 roof frame strip 4 x 2 x 206.5 cm
- 1 roof frame strip 4 x 2 x 150 cm
- 3 interior door cover strips 2.5 x 1 x 200 cm
- 2 interior door cover strips 2.5 x 1 x 150 cm
- 2 roof cover strips 201 x 4 x 1.2 cm
- 2 roof cover strips 158 x 4 x 1.2 cm
- 2 roof trim slats (left and right)
161.7 x 7 x 2.5 cm

Glass front

- 1 glass element 195.2 x 69.4 x 0.8 cm
- 1 glass element 195.2 x 69.4 x 0.8 cm
with holes drilled for door hinges
- 1 glass element 191.5 x 59 x 0.8 cm

Cover strips

- 1 corner cover with groove 194 x 6.3 x 1.2 cm
- 1 corner cover with tongue 194 x 7.6 x 1.2 cm
- 1 corner cover with groove 194 x 5.3 x 1.2 cm
- 1 corner cover with tongue 194 x 6.4 x 1.2 cm

Interior fittings



- 1 ventilation shutter
- 1 bench 62 x 195 cm
- 1 bench 62 x 143 cm
- 1 bench 62 x 79.5 cm
- 2 foot sections 60 x 46.5 x 4 cm with struts
for lower bench
- 3 bench support slat 4 x 4 x 57 cm
- 1 bench screen 35 x 195 cm
- 2 mounting rails for bench screen 4 x 4 x 26 cm
- 1 back rest 186 x 26 x 5 cm
- 1 backrests 137 x 26 x 5 cm
- 1 heater protection grilles 65 x 58 x 2 cm
- 2 heater protection grilles 52 x 58 x 2 cm
- 1 lamp guard 38 x 32 cm
- 1 floor grid 70 x 53 cm
- 2 headrests 43.5 x 25 x 7 cm

Accessories


- 1 door handle set
- 1 door hinge set
- 2 aluminium strips 67.7 cm
- 1 stainless steel bench foot 84 x 6 cm
- 1 lamp without bulb
- 1 silicon cable 3 m 5 x 2.5 mm²
- 1 silicon cable 3 m 3 x 1.5 mm²
- 1 assembly material set
- 1 assembly instruction manual

Assembly instructions

EN

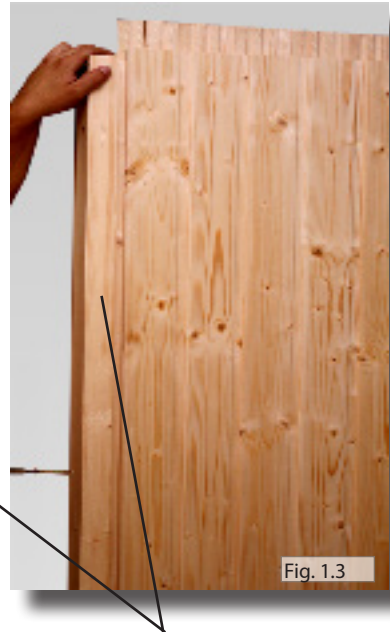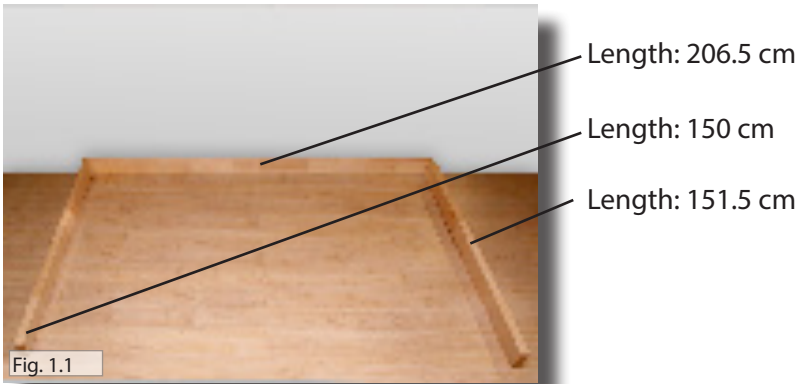

Corner connecting strip with screws:
5 x 90 mm fasten to wall elements W2
+ W4.

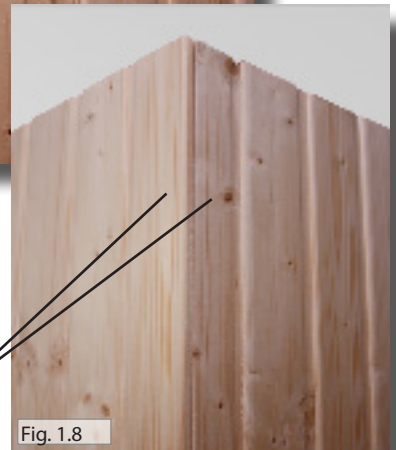

Screws: 3.2 x 40 mm



Fig. 1.9

Screws: 3.5 x 40 mm

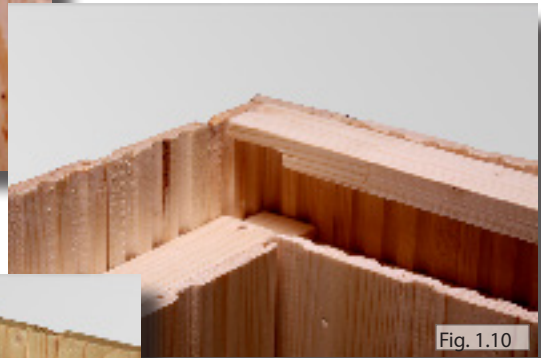


Fig. 1.10



Fig. 1.11

Screws: 5 x 80 mm

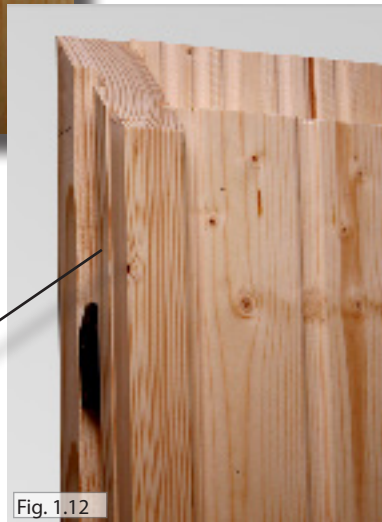


Fig. 1.12



Fig. 1.13

Roof screw connection
Screws: 5 x 80 mm



Fig. 1.14

Screws: 3.5 x 40 mm

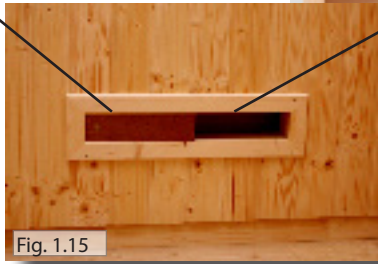


Fig. 1.15

Screws: 5 x 80 mm



Fig. 1.16

Assembly instructions

EN

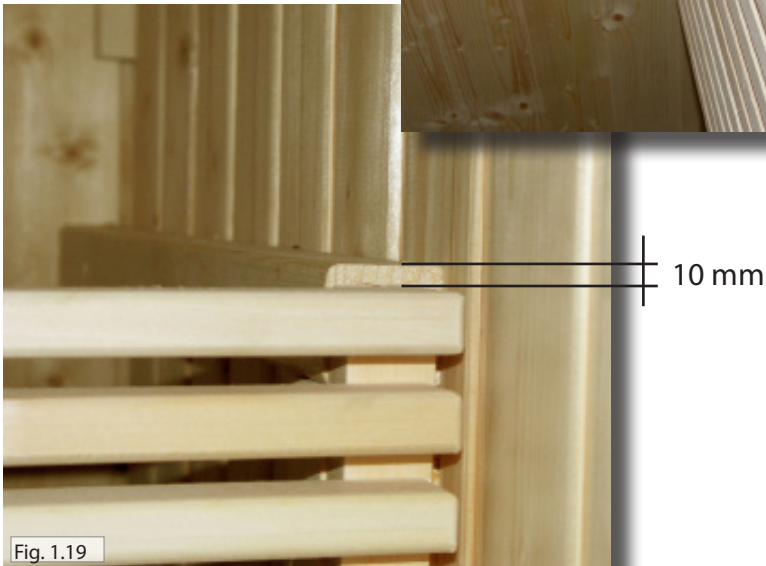
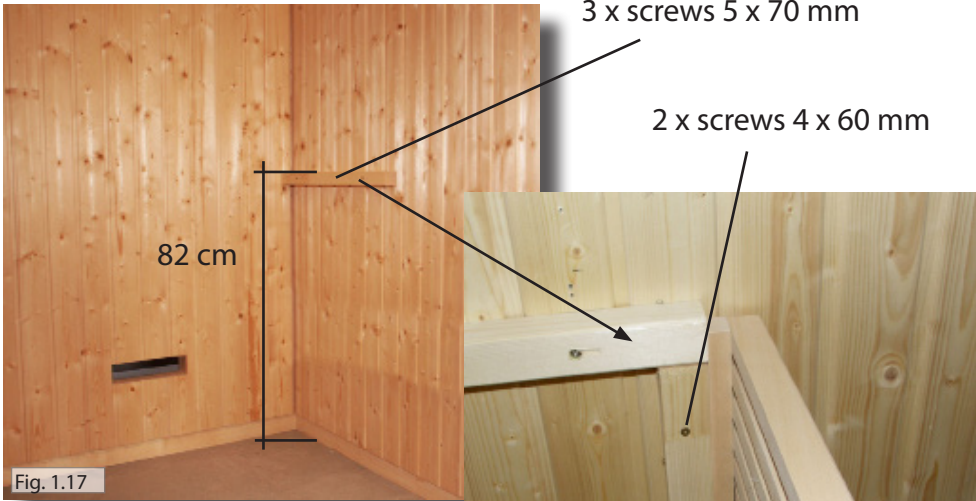




Fig. 1.20

6 x screws 2.5 x 25 mm



Fig. 1.21

Clam the stainless steel foot with an allen key.

Cross bench -
View from below!

3 x screws 5 x 70 mm




Fig. 1.22



Fig. 1.23



Assembly instructions

EN

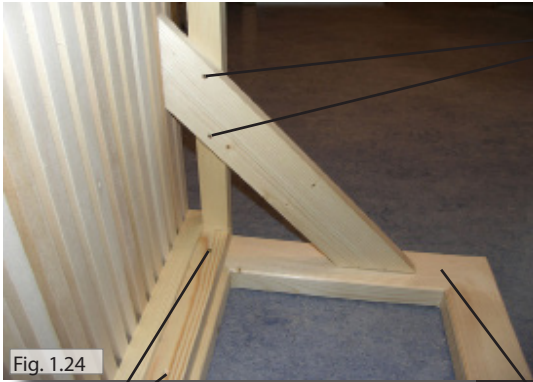

screws 3.5 x 40 mm

screws 4 x 60 mm
Mount the cross struts on the left and right of the rear bench.

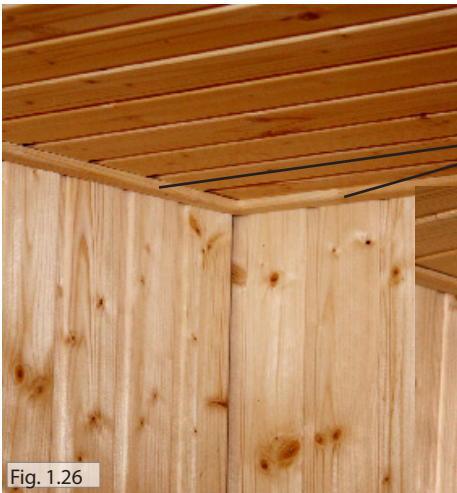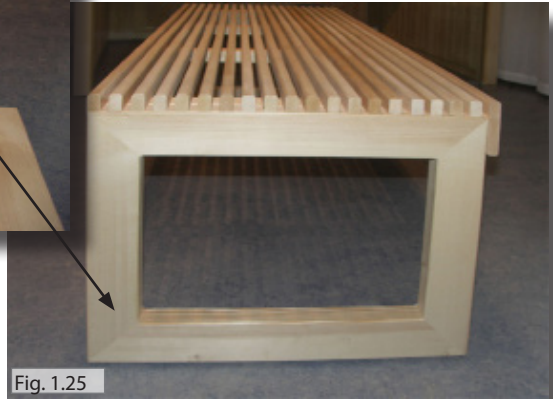


screws 3.2 x 30 mm

Vertical cover strip
screws 3.2 x 30 mm



2 x screws 3.5 x 40 mm

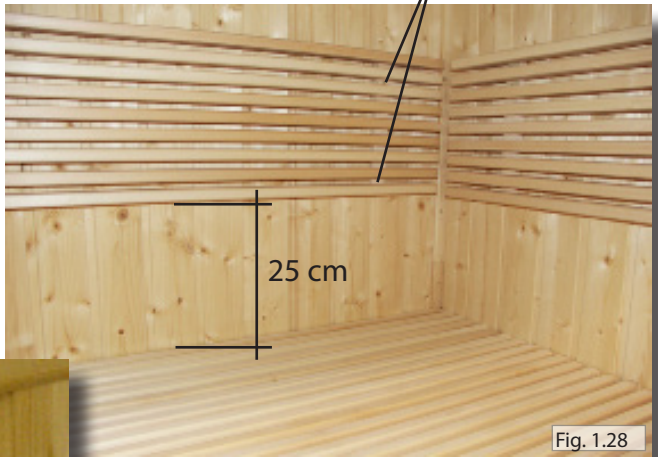

screws 3.5 x 40 mm



Assembly instructions

EN



Push the glass mounting rails down (left and right)




Glass door fitting

Aluminium strip (fasten to the floor with silicone)



Push the top glass mounting rail from right to left (the side distance on the left and right should be the same)

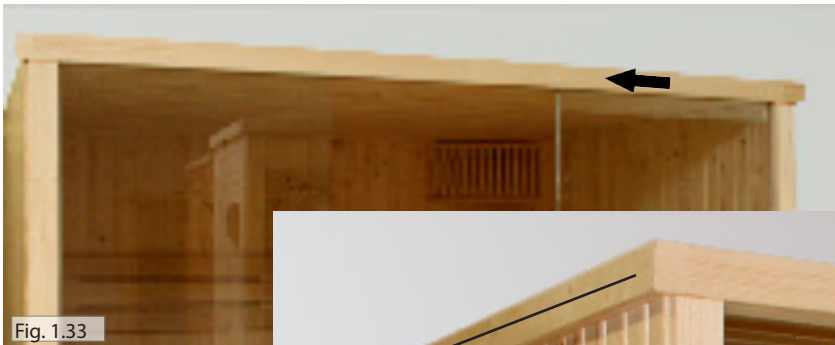

Screws
4 x 60 mm





Fig. 1.35

60 cm

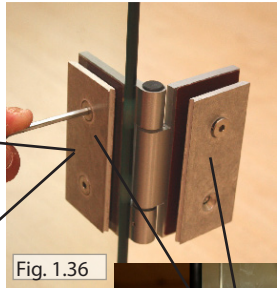


Fig. 1.36

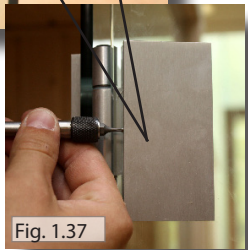


Fig. 1.37

Heater protection grille
Screws 3.5 x 40 mm

Inside

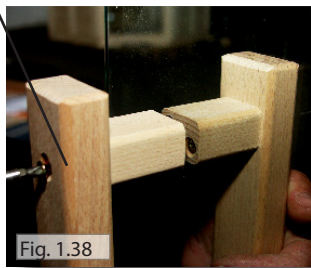


Fig. 1.38

Screws
3.5 x 40 mm



Fig. 1.39



Fig. 1.40

FLOOR PLAN OF PANORAMA SMALL 213 x 160 x 201 cm

The cabin can be set up on the left or right.

